

Simply Clean.

RA 320B Ultra Compact Performance Battery Floor Scrubber



Maintenance

daily



Remove the cover (pay attention to the suction hose connections)



Remove/clean/reinstall dirt water filter



Remove and empty dirty water and fresh water tank.
Rinse the dirty water and fresh water tank properly.

weekly



Remove, clean and check the brushes resp. the drive disc.



Clean suction nozzle and check wear and tear of the rubber blades.
Clean the complete machine properly.

What to do if...

... The machine does not function at all?

Check the charge level of the battery.
Check the battery connection
When the charger is connected, is the LED on?

... if there is weak or no suction at all?

Are the suction nozzles clean
Does the dirty-water-filter coverfit airtight / properly?
Is the suction motor running? Switch on? Suction at nozzle?

... the brushes or drive discs with pads do not turn?

Check the battery charging level
Check that the disc brushes / pad driver are well attached

... there is no water supply to the brushes / floor?

Check that the fresh water filter is clean
Check the brush motor switch
Water supply only functions, when the brush motor runs!



USA Partner
777 South Street • Newburgh, NY 12550
800.835.7812 • 845.565.8850
www.mastercraftusa.com • cleanfix@mastercraftusa.com

