



RA 330 IBC

simply clean...

! Recharge after each use
! Turn off all switches



Before using the machine the floor must be clean swept



! After charging replug device




Adjust the handle bar at the correct height (hip level) and tighten the clamp



Tilt the machine backwards and ensure that the brushes and the suction nozzles are fixed



Fill the fresh water Tank and the dose cleaning product with dosing.

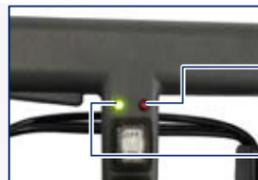

Battery indicator is blinking
red = Battery almost empty
Battery indicator glows **red**= Machine switches off after 20 sec.
Battery indicator
green = Battery is loaded




red = Battery charge
green = Battery charged




Switcher suction motor

Switcher fresh water and brush motor

Operation lever for water and brush drive constantly pressed. With this machine, it has to be cleaned by moving forward and backward

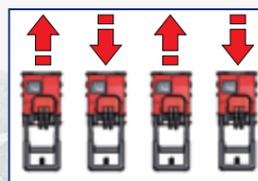

The machine must be cleaned with forward and backward

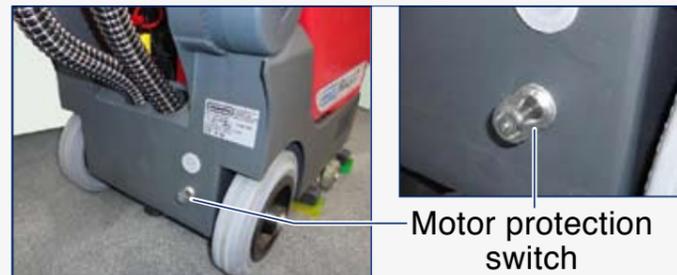

Motor protection switch

! Please use the machine on flat surfaces and not inclined to (For safety). **!**

Cleanfix Reinigungssysteme AG - Stettenstrasse
CH-9247 Henau-Uzwil / SG
Tel. 0041 71 955 47 47
Fax 0041 71 955 47 60
www.cleanfix.com
info@cleanfix.com

Service No.
CH 0041 79 357 40 33
D 0049 180 500 91 76
A 0043 662 85 69 53

daily



Remove the transparent cover



Remove the airfilter and clean it



Reassemble the airfilter



(pay regard to the suction hose adapter)



Remove the fresh water and dirty water tank, empty and flush the tanks and the fresh water filter



weekly



Remove the brushes and the pad drives



Clean and check them



Clean and check the suction nozzles regarding abrasion, clean also the machine



What to do if.....

... **The machine does not function at all?**
Check the charge level of the battery.
Check the battery connection
– is on the socket under tension
– motor protection switch press

... **if there is weak or no suction at all?**
Are the suction nozzles clean
Does the dirty-water-filter coverfit airtight / properly? Is the suction motor running?
Switch on? Suction at nozzle?

... **the brushes or drive discs with pads do not turn?**
Check the battery charging level
Check that the disc brushes / pad driver are well attached

... **there is no water supply to the brushes / floor?**
Check that the fresh water filter is clean
Water supply only functions, when the brush motor runs!

Technical Data

Rated voltage	12 V ~
Capacity fresh water	9 liters
Capacity waste water	11 liters
Brush rotation	240 rpm.
Brush diameter	2 x 170 mm
Number of brushes	2 circular brushes
Working width	330 mm
Suction Width	390 mm
Theoretical capacity	1320 m ² /h
Dimension L / W / H	520/400/550 mm
Shipping weight	35,5 kg
Total weight	44,5 kg
Sound pressure level	67 dBA
Acceleration value	< 2,5 m/s ²
Safety class	I

